



# INSTALLATION INSTRUCTIONS FOR ETHNIC TILES

## The material

The material is a woven vinyl product backed with glass-fibre-reinforced vinyl.

Since the material is a woven product, its structure is naturally irregular.

We recommend that the floor be treated with BPS immediately after installation. BPS is a surface coating that makes the floor easier to clean and more dirt-resistant.

The material is not approved for wet rooms.

## Requirements

The sub-floor must be clean, dry and free from cracks. Any adhesion-impairing spots of paint, oil, etc. and any dust should be removed. Please note that asphalt, spillages of oil, impregnating agents and felt pen markings can cause discolouration.

When installing on raised floor systems ensure that the panels are in level. Install the tiles randomly over the panels. Preferably use tackifier.

Necessary damp-proofing must be in place to prevent harmful moisture coming into contact with the flooring. Follow national rules and regulations with regard to moisture in floor structures. In the absence of such rules and regulations, use the following as guidelines.

When laying this product, the RH in any sub-floor of normal structural concrete must not exceed 85 %. This value only applies to construction moisture. Measuring must always be performed by specially trained personnel.

Sub-floors of sheet material are assumed to contain an 8 % moisture ratio (which corresponds to 40 % RH at +20°C), so that no movement occurs that may subsequently cause damage. In the event of any piping in floors, pipes must be laid so that the flooring material is not continuously exposed to temperatures higher than 30°C, as otherwise discolouration and other changes to the material can occur. This also applies to areas with underfloor heating.

## Preparations

Carefully remove all dust and loose particles.

When using leveling compound, it is important to achieve the necessary strength and evenness.

Highly or unevenly absorbent sub-floors should be pre-glued with diluted floor adhesive (1:4). The pre-glued layer must be completely dry before commencing laying. Installation on an existing plastic covering is not recommended. With painted sub-floors, there is a risk of discolouration. Existing paint must be removed.

Use pencil for any markings. Use material from the same production batch.

Before installation, material, adhesive and sub-floor must be allowed to adjust to room temperature, i.e. a temperature of at least +18°C. The relative air humidity must be 30-60 %. Higher levels of air humidity result in longer drying times and a risk of blistering.

## Installation

Make sure that the tiles have adjusted to room temperature before installation and that the boxes of tiles are on a level surface. Acclimatisation can take several days for complete pallets.

Installation should take place at a room temperature of at least +18°C. The relative air humidity in the premises must be 30-60%. Higher levels of air humidity result in longer drying times and a risk of blistering.

Use adhesives designed for vinyl flooring.

Employ wet gluing for absorbent sub-floors. With sealed sub-floors (e.g. damp-proofed sub-floor), use late wet gluing to early sticky gluing. Late sticky gluing will result in a poorer glue joint and you also run the risk of the glued edges standing out from the surface of the flooring. Normal consumption is around 4 m<sup>2</sup>/litre of adhesive for absorbent sub-floors and around 5 m<sup>2</sup>/litre for non-absorbent sub-floors. Installation time depends on various things, including type of sub-floor, absorption capacity of sub-floor, temperature and air humidity in the room.

Tackifier glue can be handy to use if it is necessary to be able to lift the tiles, e.g. installation on raised floor systems.

# BOLON

WORLD LEADER IN WOVEN VINYL FLOORING

BOLON AB BOX 73, SE-523 22, ULRICEHAMN, SWEDEN

TEL +46 321 530 400 FAX +46 321 530 450 INFO@BOLON.COM WWW.BOLON.COM

# INSTALLATION INSTRUCTIONS FOR ETHNIC TILES



For best results, the tiles should be turned one quarter-turn to form a chequered pattern (see figure 1). It also works to lay the tiles in the same direction. If this is the case, we recommend laying the tiles using a so-called bricklay, i.e. offset half a tile to the side (see figure 2). This gives a more uniform result than laying with a continuous joint, which is also possible (see figure 3).

Since the material is a woven fabric with natural variations in structure, slight differences in shade may be seen if the tiles are laid in the same direction. Take note of the direction of the arrow on the reverse as per figures 1, 2 and 3.

Figure 1

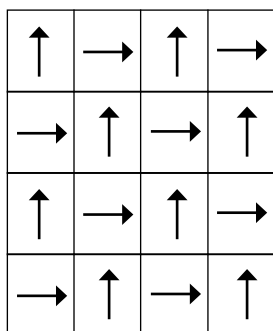


Figure 2


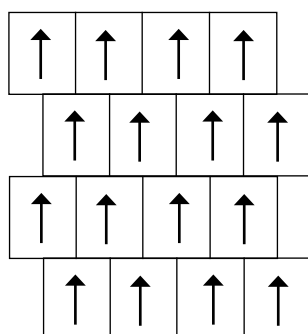


Figure 3

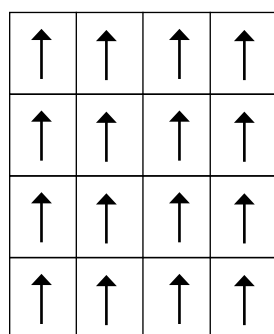

Bolon tiles should be installed using traditional installation methods for flooring tiles.

1. It is usual to begin installation from the centre of the room. In corridors and small rooms it may be simpler to work from one side to the other and use the centre line as a guide mark.

2. The centre line can be drawn out as follows: Draw a line from the centre between two of the walls. Then draw the second line to form a cross with the other line. To achieve a right angle, the 3:4:5 method can be used.

3. Begin laying tiles at the centre point. Work outwards from the first tile, creating a pyramid. Continue in this way until the first quarter of the floor is complete. Be careful to follow the guidelines and ensure that the tiles fit closely together. If the first tiles do not follow the guidelines, this will affect the whole process. Only spread adhesive over an area of a size that can be covered with tiles while the adhesive retains the right consistency.

4. As it takes time to cut edge tiles, it may be best to spread adhesive on the area where complete tiles will be laid first. Once this is done, cut all edge tiles and lay them at the same time.

5. After installation, run a joint roller over all joints lengthways and crossways with a minimum pressure of 75 kg.

## Miscellaneous

- If the material is being installed on steps, mouldings must be used.
- Wheels on office chairs must be polyamide (hard type, designed for textile flooring).
- Furniture must have feet of teflon, polythene, stainless steel or similar.
- Some types of rubber found in wheels of trolleys, entrance mats, etc. can cause discolouration in the form of migration. This type of discolouration cannot be removed.

# BOLON

WORLD LEADER IN WOVEN VINYL FLOORING

BOLON AB BOX 73, SE-523 22, ULRICEHAMN, SWEDEN

TEL +46 321 530 400 FAX +46 321 530 450 INFO@BOLON.COM WWW.BOLON.COM

## TREATING WITH BPS (BOLON PROJECT SYSTEM)

### Installation treatment

In order to make caring for your flooring easier, we recommend treatment with Bolon BPS.

### Product description:

BPS is simple to roll on and provides a dirt-resistant surface coating. One treatment is normally sufficient, but surfaces subject to very heavy traffic may over time need repeated treatments. BPS is only designed for use on Bolon flooring. Bolon AB accepts no liability for any other use.

### Consumption:

1 litre will treat 15 m<sup>2</sup>. A 4-litre pack will treat 60 m<sup>2</sup>.

Before applying, do a rough calculation of consumption for maximum effect.

### Application:

It is essential to ensure that the flooring is clean before treating (see separate care instructions). BPS should be applied at room temperature.



figure 4.

Shake the can/bottle before application.

The BPS should preferably be poured into a vessel into which the roller can be dipped. Spread an even layer; it rolls on simply using a wide roller. See figure 4. Be careful not to make the layer too thick, as this can produce permanent discolouration in the form of white spots.

If you want a thicker layer for any reason, apply two treatments, allowing it to dry in between.

The roller has been specially developed to give the right quantity evenly distributed over the floor. Begin at the innermost point of the room and work towards the door opening. Roll along the length of walls, not up towards them.

### Drying time:

BPS dries within 1-2 hours at normal room temperature and air humidity. Avoid placing heavy furniture on the floor within the first 24 hours after treatment.

The tools can be cleaned using water.

The specially-developed 45 cm roller, etc. can be ordered from Bolon.

# BOLON

WORLD LEADER IN WOVEN VINYL FLOORING

BOLON AB BOX 73, SE-523 22, ULRICEHAMN, SWEDEN

TEL +46 321 530 400 FAX +46 321 530 450 INFO@BOLON.COM WWW.BOLON.COM